 


**INSTALLATION AND NOZZLE  
REPLACEMENT GUIDE****STEP 1: REMOVE OLD DRIVE ASSEMBLY****STEP 2: ASSEMBLE NEW  
CONVERSION ASSEMBLY**

- Twist off nozzle/cap (counterclockwise).
- Separate cap from nozzle assembly.
- Snap in correct nozzle. (see Performance Chart).

**STEP 3: INSTALL NEW  
CONVERSION ASSEMBLY**

- Place new assembly in body use old body seal.
- Install new snap ring.
- Install conversion collar.
- Reinstall nozzle/cap assembly. (twist on clockwise).



**NOTE: Cap is self-tightening,  
no need to overtighten.**

Nozzle		Base Pressure (PSI)										
		50	55	60	65	70	75	80	85	90	95	100
14	Radius	55	56	57	58	59	59	60	61	61	62	62
	GPM	13.3	14.1	14.9	15.7	16.3	16.9	17.5	17.8	18.1	18.4	18.7
16	Radius	60	61	62	63	64	64	65	66	67	67	68
	GPM	16.8	17.2	17.5	17.9	18.6	19.3	20.0	21.0	21.9	22.9	23.8
18	Radius	62	63	64	65	66	66	67	68	70	71	72
	GPM	16.8	17.2	17.5	17.9	18.6	19.3	20.0	21.0	21.9	22.9	23.8
20	Radius	66	67	68	69	70	70	71	72	73	74	75
	GPM	25.0	25.8	26.6	27.4	28.1	28.8	29.5	21.0	32.5	34.0	35.5

Shaded area represents pressure not recommended for optimal nozzle performance.