

DI6734 SERIES

Replacement Internals

REPLACES: TORO® 630, 660, 730, 760

NOZZLE INSTALLATION GUIDE

STEP 1: REMOVE DRIVE ASSEMBLY

STEP 2: INSTALL NEW NOZZLE

- Twist off nozzle/cap (counterclockwise).
- Pull off nozzle assembly.
- Snap in correct nozzle.
(see Performance Chart).



FOR WINDY CONDITIONS

 
- Turn short range nozzle to vertical position to improve distribution patterns.

NORMAL WINDY



STEP 3: RE-INSTALL DRIVE ASSEMBLY

- Place new assembly in body.
- Install new snap ring.
- Reinstall nozzle/cap assembly.
(twist on clockwise).



NOTE: Cap is self-tightening,
no need to overtighten.

Nozzle	Base Pressure (PSI)										Toro Nozzle Reference				
	50	55	60	65	70	75	80	85	90	95	100	630	660	730	
14	Radius	52	53	54	55	56	57	58	59	59	60				
Yellow	GPM	11.0	12.0	13.0	14.0	14.5	15.0	15.5	15.9	16.3	16.6	17.0	31	-	31
16	Radius	55	56	57	58	59	59	60	61	61	62	62	62	32	32
Orange	GPM	13.3	14.1	14.9	15.7	16.3	16.9	17.5	17.8	18.1	18.4	18.7			
18	Radius	60	61	62	63	64	64	65	66	67	67	68	63	63	33
Brown	GPM	16.8	17.2	17.5	17.9	18.6	19.3	20.0	21.0	21.9	22.9	23.8			
25	Radius	62	3	64	65	66	66	67	68	70	71	72	34	-	34
Blue	GPM	21.8	22.6	23.4	24.2	24.8	25.4	16.0	27.0	28.1	29.1	30.1			
28	Radius	66	67	68	69	70	70	71	72	73	74	75	-	64	35
Green	GPM	25.0	25.8	26.6	27.4	28.1	28.8	29.5	31.0	32.5	34.0	35.5			

Shaded area represents pressure not recommended for optimal nozzle performance.