


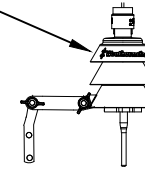

RFS RAIN/FREEZE SENSOR
(SEE LEGEND FOR MODEL)
SYNCHRONIZE TO HUB IN
CONTROLLER



WALL



PL SERIES CONTROLLER
(SEE LEGEND FOR MODEL)

CONDUIT 115V A.C.

SL-AIRCARD RJ11 CABLE

CONDUIT 24V A.C.

SL-AIRCARD MOUNTED TO
EXTERIOR WALL



FINISH GRADE

POWER SUPPLY WIRES

TO MASTER VALVE
(OPTIONAL)

#8 BARE COPPER
GROUND WIRE TO
GROUND GRID

VALVE CONTROL WIRES
(ONE PER VALVE)

00

ProLine Controller with RFS & Aircard

NTS

DETAIL-FILE