

#### INTRODUCTION:

The SL-DOME-ANT-LTE antenna is supplied with all the necessary mounting hardware and a sealing gasket. Access to the underside of the body surface is required to complete the installation.

#### INSTALLATION INSTRUCTIONS:

The SL-DOME-ANT-LTE antenna has a 20mm Base Bolt and can be mounted on to surfaces up to 5/16 inch (0.3mm) thick using a 20mm Hex Nut.

To mount the antenna, a 13/16" (20mm) hole must be drilled or punched into the surface. Make sure the mounting surface is clean.

To install the antenna, remove the Hex Nut from the Base Bolt, seat the antenna through the hole (taking care to feed the cable through the hole if necessary) and then reattach the Hex Bolt.

Use a torque wrench to tighten the Hex Nut to 21.75 ft-lbs (29.5Nm) maximum. Use the supplied cable from the antenna base to connect to the SmartLink aircard.

The attached gasket provides a seal to prevent moisture from entering the enclosure. For uneven surfaces, silicone may be added around the base of the antenna.

