

INTRODUCTION:

The SL-HG-ANT-LTE antenna is supplied with all the necessary mounting hardware and a sealing gasket. Access to the underside of the body surface is required to complete the installation.

INSTALLATION INSTRUCTIONS:

The SL-HG-ANT-LTE antenna has a 12mm Base Bolt and is mounted on to a stainless steel L-bracket using the 12mm Hex Nut provided.

To mount the antenna, mount the stainless steel L-bracket to a wall or pole using stainless steel screws or U-bolts so that the antenna, when installed, stands upright as seen in the illustration to the right. DO NOT mount the antenna upside-down or at any other angle.

To install the antenna, remove the Hex Nut from the Base Bolt, seat the antenna through the hole in the stainless steel L-bracket, place the washer over the Base Bolt and then thread on the Hex Nut.

Use a torque wrench to tighten the Hex Nut to 2.89 ft-lbs (3.92Nm) maximum. Use the supplied cable from the antenna base to connect to the SmartLink Aircard.

The supplied gasket provides a seal to prevent moisture from entering the enclosure if mounted on an enclosure. For uneven surfaces, silicone may be added around the base of the antenna.

