


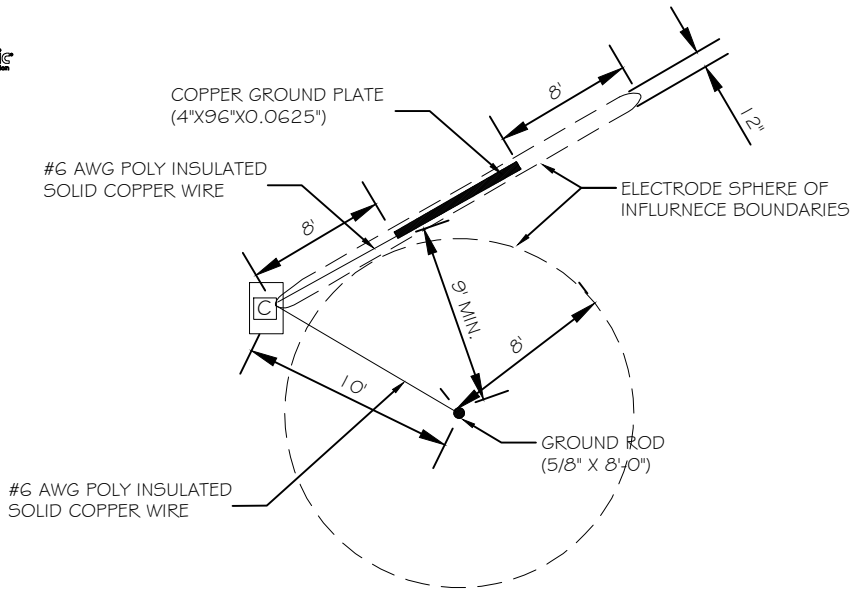


TOP VIEW



DO NOT INSTALL ANY OTHER WIRES OR CABLE WITHIN THE SPHERE OF INFLUENCE

SIDE VIEW

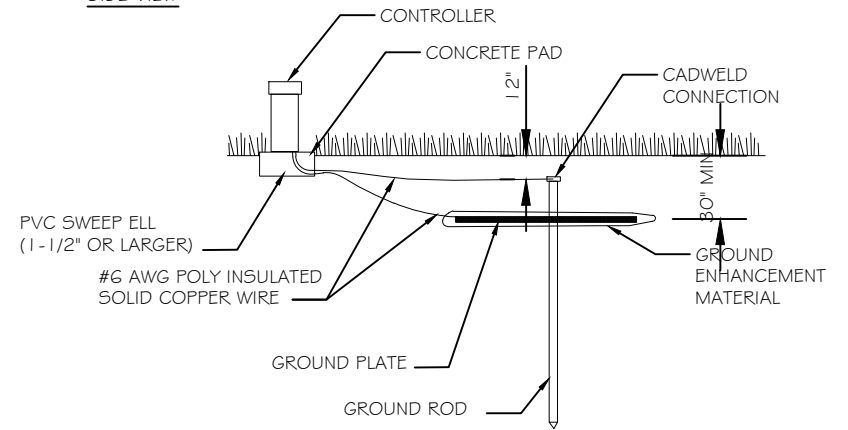

00

Weathermatic Ground Grid (Controller)

NTS

DETAIL-FILE