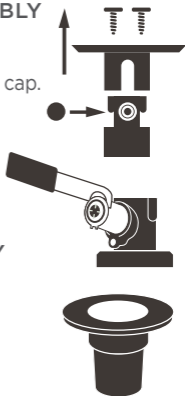



NOZZLE INSTALLATION GUIDE**STEP 1: REMOVE DRIVE ASSEMBLY****STEP 2: INSTALL NEW NOZZLE**

- Remove screws (2) on top of nozzle cap.
- Pull off nozzle cap.
- Snap in correct nozzle. (see Performance Chart).
- To remove nozzle, pull out using snap ring tool or screwdriver.

**STEP 3: INSTALLING ASSEMBLY**

- Place assembly in body.
- Install snap ring.
- Reinstall nozzle cap with screws (2).

NOTE: Tighten screws securely.

ADJUSTABLE PART CIRCLE ADJUSTMENT
ROTATE EASY ARC TABS TO DESIRED ARC


- Rotor must be OFF
- Remove EASY ARC Cap
- Using a small screwdriver or pointed object, move right and left tabs on each side of the Nozzle Marker. Example 180°
- Replace EASY ARC Cap

D75 SERIES

Performance Data

Nozzle	Pressure		Max. Radius*	Discharge	Precipitation Rate ¹		Pressure		Max. Radius*	Discharge	Precipitation Rate ¹	
	PSI	ft.			in/hr	in/hr ▲	BAR	kPa			m	L/s
32 Yellow	60	67	275	0.59	0.68	4.1	410	20.4	1.7	6.2	15.03	17.35
	70	69	293	0.59	0.68	4.8	480	21.0	1.8	6.6	15.10	17.44
	80	69	216	0.64	0.74	5.5	550	21.0	2.0	7.2	16.31	18.83
	90	71	331	0.63	0.73	6.2	620	21.6	2.1	7.5	16.11	18.60
36 Gray	60	67	28.0	0.60	0.69	4.1	410	20.4	1.8	6.4	15.32	17.69
	70	69	32.2	0.65	0.75	4.8	480	21.0	2.0	7.3	16.59	19.16
	80	69	34.0	0.69	0.79	5.5	550	21.0	2.1	7.7	17.52	20.23
	90	73	36.5	0.66	0.76	6.2	620	22.2	2.3	8.3	16.82	19.43
41 Orange	60	65	32.3	0.74	0.85	4.1	410	19.8	2.0	7.3	18.80	21.71
	70	71	34.5	0.76	0.76	4.8	480	21.6	2.2	7.8	16.81	19.41
	80	73	37.7	0.79	0.79	5.5	550	22.2	2.4	8.6	17.40	20.10
	90	73	39.9	0.72	0.83	6.2	620	22.2	2.5	9.1	18.40	21.25

¹Precipitation rates for square and triangular spacing calculated at 50% of diameter for half-circle operation. Assumes zero wind for precipitation and radius. Adjust for local conditions.